

Fix the Handle

How to Fix the Handle

1. Locate the Fixing Point:

*Find the spot on the device labeled "Fix the handle here."



*This is where the handle should be attached.

2. Align the Handle:

*Place the handle in the designated position.

*Ensure the holes on the handle align with the screw holes on the device.



3. Insert the Screw:

- Take the provided screw (visible in the center of the fixing point in the image).
- Insert it through the handle into the hole.

4. Tighten the Screw:

- Turn the screw clockwise until it is securely tightened.
- Ensure the handle does not move or wobble.



5. Check for Stability:

- Once fixed, gently pull the handle to confirm it is stable and securely attached.
- The handle makes it easy to wind and unwind the cable.

To prevent overheating and maximize charging efficiency, please fully unwind the cable of your Wundercurrent EV Charger before charging

Customer Support

For any questions or issues, please contact us at:

- **Call/WhatsApp:** +91 9313197730
- **Email:** wundercurrentev@gmail.com
- **Website:** www.wundercurrent.in

Enjoy a safe and efficient charging experience with WunderCurrent!